

Control codes for mobile phone

All GSM codes at a glance*

Checking your own phone number	
Check your own phone number	* 1 3 5 # ✓

(Call Wait/ Call Hold / Multiparty) (nor for Xtra)	
Activate call waiting	* 4 3 # ✓
Disable call waiting	# 4 3 # ✓
Call waiting status check	* # 4 3 # ✓
If there is a second connection, end the held connection.	0 ✓
Reject incoming call with busy signal	0 ✓
End active connection and activate held connection	1 ✓
Ending the connection with the first caller	1 1 ✓
Ending the connection with the second caller	1 2 ✓
Switch between 2 connections	2 ✓
Connect two calls to a conference call	3 ✓

Recall (CCBS)	
Callback request	* # 3 7 # ✓
Deactivation Recall	# 3 7 # ✓

Caller ID (CLIP/CLIR)	
Status query for incoming caller ID (CLIP)	* # 3 0 # ✓
Status query for calling line identification reversal (CLIR)	* # 3 1 # ✓
Transfer phone number for this call	* 3 1 # ✓
Hide phone number for this call	# 3 1 # ✓

(Call Forwarding (CF))	
Set CF automatically	* * 2 1 * phone number # ✓
Set CF rejection (default 15 sec.)	* * 6 1 * phone number # ✓
Set CF time interval between 05 and 30 seconds	* * 6 1 * ... * 1 1 * [05-30] # ✓
Set CF unavailability	* * 6 2 * phone number # ✓
CF Set to busy	* * 6 7 * phone number # ✓
Enable CF for telephony	* * ... * phone number * 1 1 # ✓

Control codes for mobile phone

All GSM codes at a glance

Call Forwarding (CF) - Continued from page 1	
Enable CF for fax service	* * ... * phone number * 1 3 # ✓
Enable CF for data service	* * ... * phone number * 2 0 # ✓
Simultaneous activation of all CFs; network/device dependent	* * 0 0 2 * phone number # ✓
Simultaneous activation of all conditional CF; network/device dependent	* * 0 0 4 * phone number # ✓
Switch on already programmed CF Automatically to last number dialed	* 2 1 # ✓
Switch on already programmed CF Do not accept last number called	* 6 1 # ✓
Switch on already programmed CF Unreachable to last number called	* 6 2 # ✓
Switch on already programmed CF Busy to last number called	* 6 7 # ✓
Enable all program-related CFs for the last number dialed; device-dependent	* 0 0 4 # ✓
Deactivating a pre-programmed CF Automatically	# 2 1 # ✓
Deactivating a preprogrammed CF non-acceptance	# 6 1 # ✓
Deactivating a CF that has already been programmed Not available	# 6 2 # ✓
Deactivating a preprogrammed CF busy signal	# 6 7 # ✓
Disable all conditional CF; device-dependent	* 0 0 4 # ✓
Status queries for CF (example: status query busy *#67# [send])	* * ... # ✓
Disable CF Automatic	# # 2 1 # ✓
Disable CF non-acceptance	# # 6 1 # ✓
Disable CF unreachable	# # 6 2 # ✓
Disable CF busy	# # 6 7 # ✓
Simultaneous deletion of all CF	# # 0 0 2 # ✓
Simultaneous deletion of all conditional CF; network/device dependent	# # 0 0 4 # ✓

Call barring (not for XTRA)	
Change password; default: 7777	* * 0 3 * 3 3 0 * old Password * new Password * new Password # ✓
Enable "Block all outgoing calls"	* * 0 3 * Password # ✓
Enable "Block all incoming calls"	(Call Barring) (not for XTRA)
Activate "Block all outgoing international calls"	* 3 3 1 * Password # ✓
Enable block for fax service	* ... * Password * 1 3 # ✓
Sperre für Dienst Daten aktivieren	* ... * Password * 2 0 # ✓
Status query for call barring (e.g., *#331#[send])	* # ... # ✓

Control codes for mobile phone

All GSM codes at a glance*

Rufsperrn (Call Barring) (nicht für XTRA) - Continued from page 2	
Delete "Block all outgoing calls"	# 3 3 * Password #
Delete "Block all incoming calls"	# 3 5 * Password #
Delete "Block all outgoing international calls"	# 3 3 1 * Password #
Delete all call blocks	# 3 3 0 * Password #

PIN / PUK / IMEI	
Change PIN	* * 0 4 # old PIN * new PIN * new PIN #
Unlock locked PIN with PUK	* * 0 5 # old PUK * old PIN * new PIN #
Change PIN2	* * 0 4 2 * old PIN2 * new PIN2 * new PIN2 #
Unlock locked PIN2 with PUK2 or activate PIN2	* * 0 5 2 * old PUK2 * new PUK2 * new PUK2 #
Display IMEI; device-dependent	* # 0 6 #

Important information about tax codes (GSM codes) at a glance*

When using the control codes to set up or change call forwarding from your own cell phone to your own phone number (voicemail), enter 3311 instead of the phone number.